

Preparing the WSR für Overhead-drilling (latest one day before using!)

1. On the side with label „WSR“ on the left and on the right 1 drill with \varnothing 6mm each.

Drill with \varnothing 6 mm




Drill with \varnothing 6 mm

Drill with Ø 6 mm




2. Reduce the distance between the end of the seal:

- Take off a part (ca.15 cm) of the seal and install a little bit longer part of the seal.

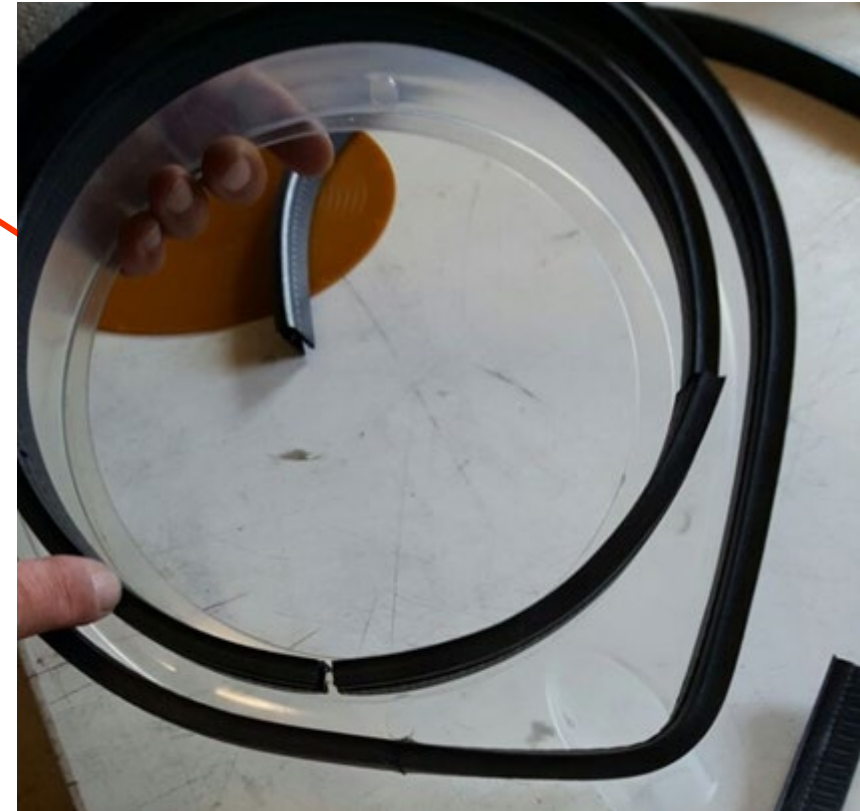


3. Clean the underside of the seal disk (plain) free from grease

3.

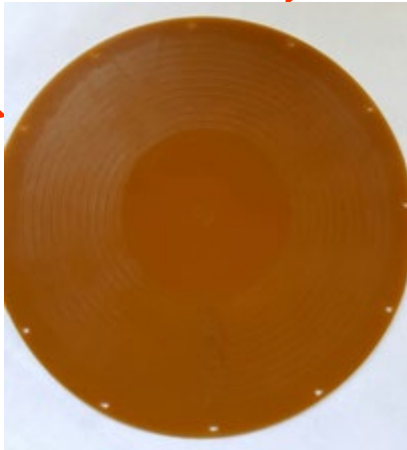

4. Affix double-sided adhesive tape (Tesa) on the brink of the WSR

4.

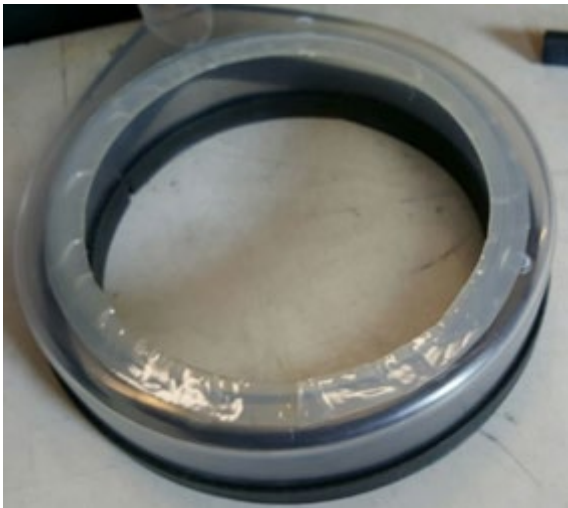

5. Affix the seal disk and press it on



6. For safety fix an additionally textile adhesive tape inside



7. Cut the seal disk concentric in desired size (the midmost number you can see shows the size of the drill core)

